




Abnormal loads on Storebælt

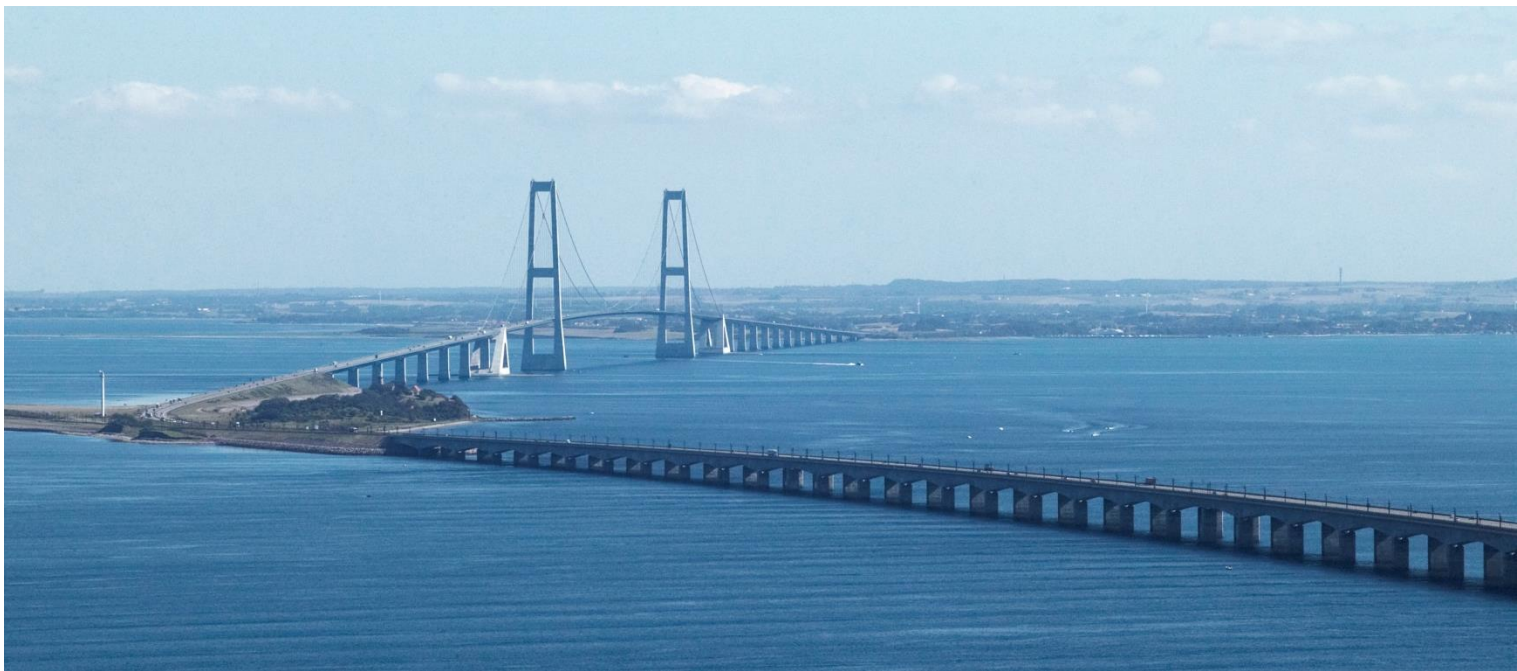

Storebælt
Sund \approx Bælt

Classification

Instructions for crossing the Storebælt Bridge with vehicles classified as abnormal loads:

1. Vehicles wider than 3.3 metres

Permission by telephone is required. Please contact Storebælt's Control room at + 45 58 30 30 50 no later than 2 hours prior to passage.

2. Vehicles in weight class larger than 100 and/or wider than 4.5 metres

Written permit from the Danish Road Directorate is required and you must bring the permit with you when crossing the Storebælt Bridge.

3. Slowly moving loads below 50 km/h

Please contact Storebælt per mail s-transport@sbfdk.dk no later than 3 working days prior to passage.

No need to contact Storebælt if:

- the weight class of the vehicle is equal to or less than 100
- the width of the vehicle does not exceed 3.3 metres
- the axle load is less than 12 tons

Width restrictions

Width 2.8–4.5 metres

Keep to the right when passing the toll station (pass in the "Kontant/Cash" lanes 10/20).

Width more than 4.5 metres

Keep to the right when passing the toll station (pass in the "Kontant/Cash" lanes 10/20).

Passage only from 10 PM to 6 AM.

The carrier must arrange for 2 escort vehicles behind the abnormal load transport.

If the width is more than 5.4 metres westbound or more than 6.5 metres eastbound, the vehicle must bypass the toll station via Halsskovvej.

Weight restrictions

Weight class more than 100

Keep to the right when passing the toll station (pass in the "Kontant/Cash" lanes 10/20).

Passage only from 10 PM to 6 AM.

Storebælt's written transport restrictions must be obeyed.

Speed restrictions

Speed less than 50 km/h

Keep to the right when passing the toll station (pass in the "Kontant/Cash" lanes 10/20).

Passage only from 10 PM to 6 AM, (possibly more vehicles in a row).

An escort vehicle is provided by Storebælt.

Transport permit

If you need a permit for a Special transport you must apply for a permit at the Danish Road Directorate. [Introduktion - Ansøg om tilladelse til særtransport | Virk](#)

When the application has been processed the applicant receives a permit from the Danish Road Directorate together with a letter from Storebælt indicating the restrictions for crossing the Storebælt Bridge.

Other restrictions

Annual permit: Annual permit issued by the the Danish Road Directorate must be carried with you at all times and shown on request when crossing the Storebælt Bridge. Carriers with an annual permit are still obliged to contact Storebælt prior to passage.

Escort vehicles: The customer's own escort vehicles will be charged toll in accordance with current prices.

Hazardous goods: No special restrictions apply for transport of hazardous goods besides the general rules in force on the Storebælt Bridge.

Further information

- The Control room (tel. +45 58 30 30 50) provides information about weather and traffic conditions.
- Never pass the Express or Card lanes if the width of the vehicle exceeds 2.8 metres. Use the "Kontant/Cash" lanes to the right instead (the lanes 10/20).
- The responsibility for any damage to the toll station construction/structure lies with the carrier.
- No height restrictions apply. However, please be aware of the following construction heights:
 - Bridge, exit 45 4.5 m
 - Bridge, exit 43 4.5 m
 - Overhead signs 5.5 m
 - Card lanes 5.0 m
 - Express lanes 5.0 m
 - Kontant/Cash lanes (10 and 20) 5.0 m
- Requisite tractive force must be assured. The east bridge's gradients:
 - From Sprogø 2.1 %
 - From Halsskov 1.8 %
- Wind sensitive vehicles: In the event of heavy side wind exceeding 10 m/s, the carrier has to consider whether it will be safe to cross the Storebælt Bridge.
- Be aware of any road works on the Storebælt Bridge.

Reg. no. 158 205 – CVR no. 10 63 49 70

Tel. +45 70 15 10 15

Monday to Friday 9 AM to 3 PM

Control room tel. +45 58 30 30 50
(staffed 24 hours)



Storebæltsvej 70, DK-4220 Korsør
www.storebaelt.dk